


## Number of stays chart - L 164 mm



h	DOOR WEIGHT (Kg)									
	1	1,5	2	2,5	3					
200 - 224	2 x 80 N									
225 - 274	2 x 80 N									
275 - 300	2 x 80 N									

## Number of stays chart - L 244 mm




h	DOOR WEIGHT (Kg)													
	1	1,5	2	2,5	3	3,5	4	4,5	6	6,5	7	7,5	8	8,5
290 - 324	2 x 120 N													
325 - 374	2 x 120 N													
375 - 424	2 x 120 N													
425 - 474	2 x 120 N													
475 - 500	2 x 120 N													

LIFT UP DRILLING PLANS WITH STANDARD HINGES - PUSH TO OPEN





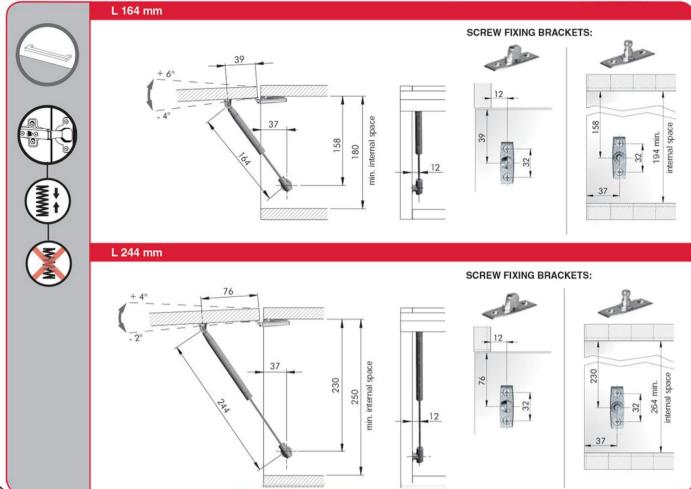

## L 164 mm SCREW FIXING BRACKETS: 52 147 nternal space 4 147 internal 170 - K Push Tech 14 mm - With magnet min. - Visible or invisible version 52 For details refer to section "PUSH CATCHES & MAGNETIC CATCHES". L 244 mm SCREW FIXING BRACKETS: 52 internal space 224 224 245 min. - K Push Tech 14 mm 52 - With magnet - Visible or invisible version

The dimensions of the above drilling plan refer to carcases which use standard sprung or unsprung hinges and mounting plates 0 mm. Please note that the opening angle shown data is purely indicative. It varies with respect to the hinge brand and adjustment carried out.





For details refer to section "PUSH CATCHES & MAGNETIC CATCHES".